
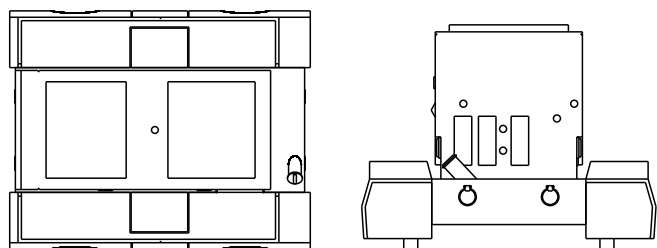
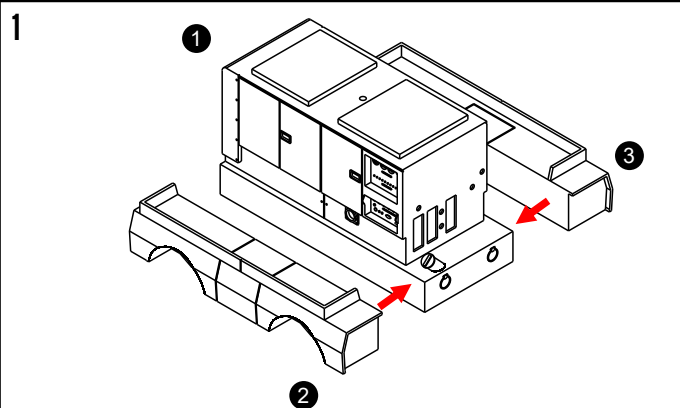





RESIN PARTS

130548

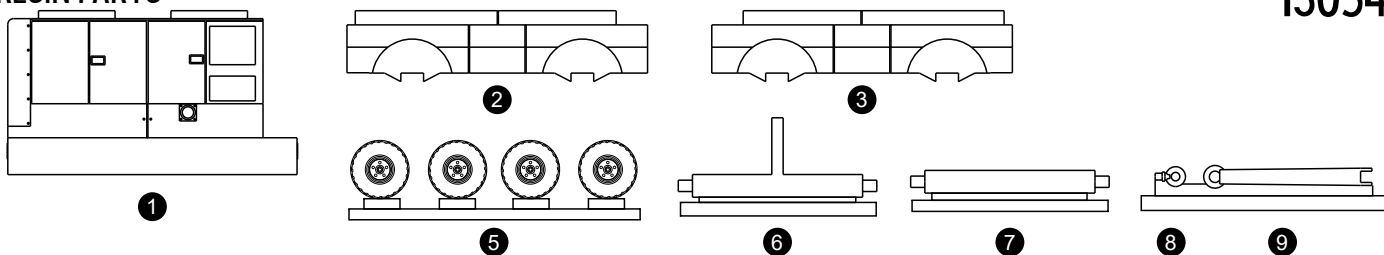


CORRECT PLACEMENT

**TIP: POSITION THE PARTS WITH VINYL GLUE.
THEN FIX WITH CYANOACRYLATE**

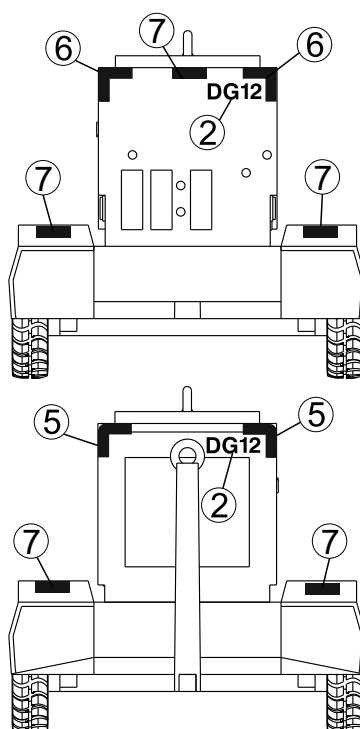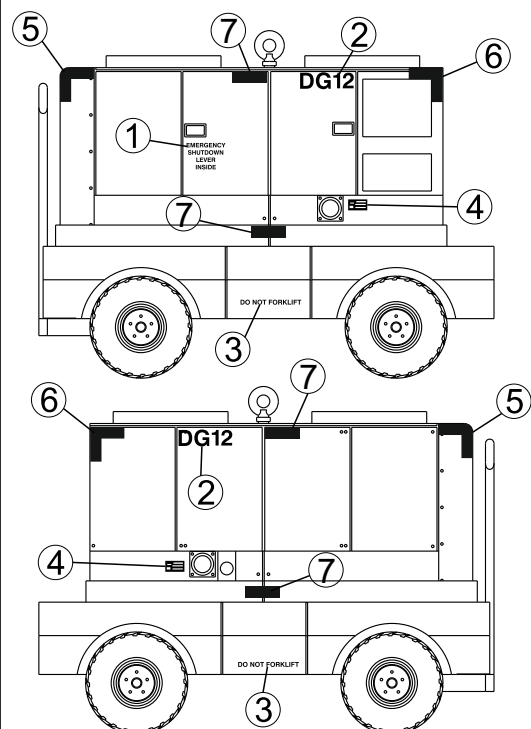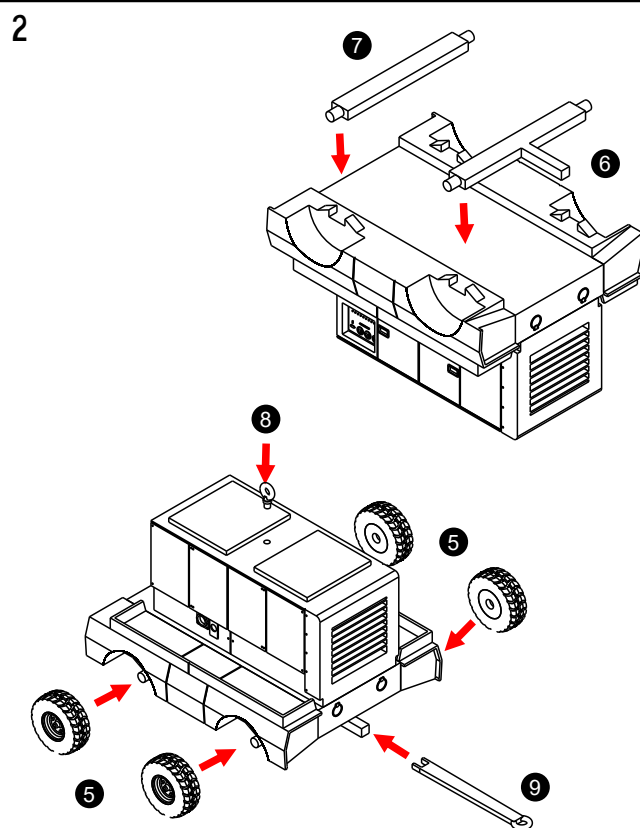

PAINTING & DECAL PLACEMENT

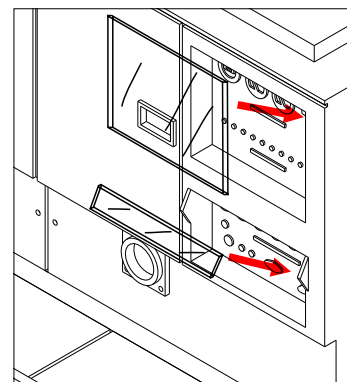

CUT AND POSITIONED AS SHOWN TWO SMALL PIECES OF TRANSPARENT. PAINT THE BOTTOM OF THE PANEL BLACK GAUGES & KNOBS WHITE. FOR INFORMATION ON THE POSITIONING OF THE RUBBER CABLES SEE THE PICTURES ON OUR SITE.

**PAINT GREEN (XF-58) OVERALL
OR
PAINT GREY (XF-19) OVERALL**



